




CONSUMER ELECTRONICS

PHILIPS

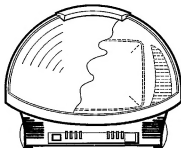

14GR1220

COLOUR TELEVISION
FARBFERNSEHER
TÉLÉVISEUR COULEUR
KLEURENTELEVISIE
TELEVISORE A COLORI
TELEVISOR EN COLOR
TELEVISÃO A CORES
FARVEFJERNSYN
FARGE-TV
FÄRG-TV
VÄRITELEVISIO

GB	English	Operating instructions	Page 1 - 7
D	Deutsch	Bedienungsanleitung	Seite 8 - 14
F	Français	Mode d'emploi	Page 15 - 21
NL	Nederlands	Gebruiksaanwijzing	Pagina 22 - 28
I	Italiano	Istruzioni per l'uso	Pagina 29 - 35
E	Español	Instrucciones de manejo	Página 36 - 42
P	Português	Modo de emprego	Página 43 - 49
DK	Dansk	Betjeningsvejledning	Side 50 - 56
N	Norsk	Bruksanvisning	Side 57 - 63
S	Svenska	Bruksanvisning	Sidan 64 - 70
FI	Suomi	Käyttöohje	Sivu 71 - 77

PAL/SECAM (B + G)

Only if your TV is suitable for PAL/SECAM

This colour television set is only suitable for reception of both PAL and SECAM (B + G) transmissions. Switch-over from PAL to SECAM (B + G) or vice versa is fully automatic.

GB

Nur bei Fernsehgeräten, die für PAL/SECAM - Empfang geeignet sind. Dieses Farbfernsehgerät eignet sich nur für den Empfang von PAL- und SECAM (B + G)-Übertragungen. Umschaltung von PAL auf SECAM (B + G) erfolgt vollautomatisch.

D

Uniquement si votre téléviseur est adapté aux standards PAL/SECAM. Ce téléviseur couleur n'a été conçu que pour la réception des émissions selon les systèmes PAL et SECAM (B + G). La commutation PAL-SECAM (B + G) ou inversement se fait entièrement automatiquement.


F





Solo se il vostro televisore è adatto per i sistemi PAL/SECAM. Questo televisore a colori è adatto per la ricezione solamente dei programmi trasmessi secondo i sistemi PAL e SECAM (B + G). La commutazione del sistema PAL a quello SECAM (B + G) o viceversa avviene automaticamente.

I

Si su aparato esta preparado para PAL/SECAM. Este televisor en color sirve sólo para el sistema de transmisión PAL y SECAM (B + G). El aparato se conmuta automáticamente de uno a otro.

E

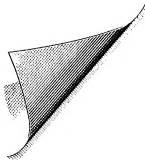

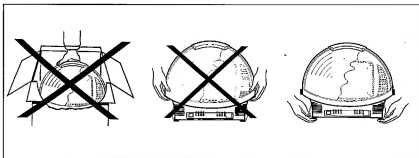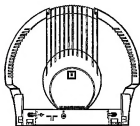

Write in pencil your TV station (or device) selections here:

No. TV station/device	No. TV station/device
0	20
1	21
2	22
3	23
4	24
5	25
6	26
7	27
8	28
9	29
10	30
11	31
12	32
13	33
14	34
15	35
16	36
17	37
18	38
19	39

Installing and adjusting the TV**Page 2 to 3**

The best way to carry the set
To install the TV
To connect the TV
Using the visor
To switch the TV on and off
To insert batteries in the remote control handset
To test the remote control handset
To store TV stations on program numbers

Operating the TV**Page 4 to 5**

To select TV stations using program numbers
To change and store the picture and sound settings
To switch off the sound
To select stand-by mode
To select the 'sleep-timer'
To display information

Additional features**Page 6 to 7**

To connect a video recorder
To use the 'store lock'
Removing the visor
Replacing the visor
Adjusting the angle of the TV set

General information**Page 7**

To clean the TV screen
To clean the visor
Fault indication

Introduction

If you follow these operating instructions you will quickly learn how to adjust and operate all the functions of your new TV ; but always read and perform the instructions in the sequence shown.

TV -Indicates actions that are performed using the TV buttons .

RC -Indicates actions that are performed using the remote control handset.

Installing the TV

- * Remove any packaging from the TV.

ATTENTION : Best way to carry the tv

- * Carry the tv as shown in the drawing on flap page. To prevent damage never carry the tv holding the visor.

- * Find the remote control handset and indoor aerial within the packaging.

- * Place the TV on a solid base.
- * Leave at least 3 cm around each side of the TV for ventilation.



TV To connect the TV

IMPORTANT : The TV is only suitable for a mains voltage of 220/240 V ~ 50 Hz (Consult your dealer if the mains supply is different).

- * Connect the TV to the mains supply socket.



- * If the indoor aerial is used, connect it to the tv at the mounting socket on the rear panel .



- * Connect the aerial plug to the "T" socket on the back of the TV.

TV Adjusting the visor

- * You can watch TV with the visor in the following positions:
 - Visor closed-less light
 - Visor open =normal light



- * Lift the visor as shown in the drawing. Stop at the end of the lifting cycle.

ATTENTION : Do not use too much force.



- * Close the visor as shown in the drawing.

TV To switch the TV on

- * Press the **POWER** button on the front of the TV.



- * If the **RED** lamp below the TV screen is on, then you must press the **DOWN** or **UP** **PROGRAM** button . The TV will then switch on (for further information refer to the section 'To select stand-by mode').



TV To switch the TV off


- * Press the **POWER** button on the front of the TV.
(If you want to switch off the TV temporarily refer to the section 'To select stand-by mode').



-  **To insert batteries in the remote control handset**
- Remove the battery cover on the back of the remote control handset.
 - Insert the two batteries supplied (type LR03 1.5 V).
 - Replace the battery cover.



-  **To test the remote control handset**
- The buttons you will need to perform this test are behind a cover; you must slide back this cover to gain access to the control buttons. Close it once any required test has been completed.

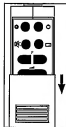

- Switch on the TV.
- Hold the remote control handset and direct it at the lamp below the screen.



- Press the  or  P button. The lamp will flash RED each time a button is pressed.



Adjusting the TV

The control buttons for storing TV stations on program numbers are on the front of the TV.



-  **To store TV stations on program numbers**
(Up to 40 TV stations can be stored on program numbers using the following method).

1. Press the  STORE button, so that the moving bar and other information is displayed on the screen.



2. Press the  CONTROL button so that the TV automatically searches until a TV station is found and displayed on the screen.
If you want to continue searching for a specific TV station then press the  CONTROL button again.



3. Select the required program number (0 to 39) by pressing the  or  PROGRAM button. The selected program number is displayed on the screen.



4. Press the  STORE button to store this selection. The moving bar and other information is now removed from the screen.

Repeat steps 1 to 4 until all the TV stations you require have been stored on program numbers.

Operating the TV



You can now operate your TV either using the remote control handset or directly using the TV buttons.

- * Switch on the TV by pressing the **Ⓚ POWER** button on the front of the TV. The TV station stored on program number 1 is automatically selected.

Ⓚ To select TV stations using the remote control handset



- * Press the **▶ P** button to select a TV station stored on a higher program number.
- * Press the **◀ P** button to select a TV station stored on a lower program number.

Ⓚ To select TV stations using the TV buttons



- * Press the **▲ PROGRAM** button to select a TV station stored on a higher program number.
- * Press the **▼ PROGRAM** button to select a TV station stored on a lower program number.

Ⓚ To change and store the picture and sound settings

(When the TV is first switched on the picture and sound settings are at certain values; initially these values have been stored by the factory, but you can store your own 'personal preferences' using the 'On-Screen-Men').



- * Press the **MENU** button to select the first item on the menu.



The brightness:

- * Press the **▲ CONTROL** button to increase the brightness.
- * Press the **▼ CONTROL** button to decrease the brightness.
- * If you want to store this setting press the **◀ ▶ STORE** button.

- * Press the **MENU** button to select the next item on the menu.

The contrast:

- * Press the **▲ CONTROL** button to increase the contrast.
- * Press the **▼ CONTROL** button to decrease the contrast.
- * If you want to store this setting press the **◀ ▶ STORE** button.



- * Press the **MENU** button to select the next item on the menu.

The colour:

- * Press the **▲ CONTROL** button to increase the colour intensity.
- * Press the **▼ CONTROL** button to decrease the colour intensity.
- * If you want to store this setting press the **◀ ▶ STORE** button.



- * Press the **MENU** button to select the next item on the menu.

The volume:

- * Press the **▲ CONTROL** button to increase the volume.
- * Press the **▼ CONTROL** button to decrease the volume.
- * If you want to store this setting press the **◀ ▶ STORE** button.



- * Press the **MENU** button to leave the menu.

Note: If you want to leave the menu . For example after changing the contrast setting. You can either wait approximately 15 seconds or continue to press the **MENU** button until the menu disappears from the screen.

or To change the volume

The volume can be changed temporarily outside the menu using the or VOLUME button on the TV, or the button on the remote control handset.

- * Press the VOLUME button to increase the volume.
- * Press the VOLUME button to decrease the volume.

Or

- * Press the side of the button to increase the volume.
- * Press the side of the button to decrease the volume.



To switch off the sound



- * Press the button to switch off (mute) the sound.
- * is displayed on the screen
- * Press the button again to switch the sound on.
- * is removed from the screen.

To select stand-by mode

The TV can be put into stand-by mode in the following ways:

Directly

- * Press the button, the RED lamp below the TV screen is then on, and the TV is put into stand-by mode.

Automatically

Approximately 10 minutes after a TV station stops broadcasting (closedown) then TV switches itself to stand-by mode automatically.



To select the 'sleep-timer'

(With this feature you can select a time period after which the TV switches to stand-by mode).



- * Press the button until the required time period is displayed on the screen (the time period can be set in steps of 15 minutes starting from 90 minutes).

During the final minute of the selected time period, the seconds remaining begin to 'count down' on the screen informing you that the TV is going to switch to stand-by mode. At the end of this time period the TV switches to stand-by mode and the RED lamp below the screen lights.

or To switch on the TV from stand-by mode

- * Press either the or P button on the remote control handset.



Or,



- * Press the or PROGRAM button on the front of the TV. The RED lamp below the screen is then off.

To display information

(the 'On-Screen-Display' allows you to see the program number on which a TV station is stored, and if the timer for stand-by mode is being used).

- * Press the button to display the information on the screen.
- * Press the button again to switch off the information display.



Note: If you make changes to the volume after the button has been selected then a moving bar is displayed which represents these changes as they are being made.

Additional features

- TV** To connect a video recorder
(First you must refer to the operating manual supplied with your video recorder for connection details).
* Switch off the TV before connecting the video recorder.



- * Connect the TV aerial cable to the **TV** input on the video recorder.
- * Connect one side of the cable supplied with the video recorder to the TV output on the video recorder and the other side of the cable to the **TV** input on the TV.

Note: The **TV** socket can also be used to connect other devices such as computers or TV games.

- TV** To store the video recorder signal on a program number

- * Switch on the TV, and the video recorder.

1. Insert a pre-recorded tape in the video recorder, and press the 'PLAY' button on the video recorder.
2. Press the **◇◇** STORE button so that the moving bar and other information is displayed.
3. Press the **▲**CONTROL button so that the TV automatically searches for the video signal, if necessary press this button again until the video signal is found.
4. Select an available program number by pressing the **▼** or **▲** PROGRAM button on the TV.
5. Press the **◇◇** STORE button to store the video signal on the selected program number.
6. Press the 'STOP' button on the video recorder.



- TV** To select the program number for the video recorder signal
- * Press the appropriate **◀** or **▶** P button (for the program number on which the video signal has been stored).

- TV** Hotel Mode (store lock)

This feature allows you to lock a specific maximum volume and prevents starting of the installing tuning procedure inadvertently. It also blocks the store key electrically.



- To lock

- * Select program number 38 using the **▼** or **▲** PROGRAM buttons.
- * Select a maximum volume which you want to store using the **▼** or **▲** VOLUME buttons.



- * If you press **◇◇** STORE and **▲** PROGRAM buttons simultaneously the electronic lock of maximum volume and store button is activated.



- To unlock

- * Select program number 38 using the **▼** or **▲** PROGRAM buttons.



- * Press the **◇◇** STORE button and the **▲** CONTROL button simultaneously. Store function and maximum volume are unlocked.

Removing the visor

IMPORTANT: Perform this operation carefully, otherwise you can damage the visor.
(If you want to clean the visor refer to section General Information).



- 1- Unscrew the screw on the 'B' visor knob.
- 2- Pull the 'B' visor knob.
- 3- Turn and pull the 'A' visor knob.
- 4- Remove the visor.



Replacing the visor



- 1- Insert the 'A' visor knob.
- 2- Push and turn.
- 3- Insert the 'B' visor knob.
- 4- Make sure of its right position.
- 5- Turn the screw in the 'B' visor knob.

Adjusting the angle of the TV set

* To get a perfect vision field you can adjust the angle of the TV set turning both wheels on the sides of the TV. Adjustment is allowed only between high position or low position.



- * Turn both the wheels up to lift the angle of the TV.



- * Turn both the wheels down to drop the angle of the TV set.

General information

To clean the TV screen

- * It is possible to clean the TV screen using a slightly damp chamois leather. Never use aggressive cleaning agents.

To clean the visor

- * It is possible to clean the visor using a slightly dampened chamois leather. Never use alcohol or aggressive cleaning agents. Do not use anything abrasive the visor can be damaged.



Fault indication

IMPORTANT: never attempt to repair a broken TV yourself; always consult a qualified TV service engineer.

* If the TV does not give the desired picture or sound quality after switching on then check that:

- the aerial is connected properly
- all controls and buttons are selected correctly
- the selected TV station has not 'closed-down'
- the sound is switched on (not 'muted').

Switch off the TV if:

- the RED lamp below the screen is flashing continuously
- a bright white line is displayed across the screen.



IDENTITY CARD

GERMAN- KERNHAUSE

CAVITE D'IDENTIFI- CATION

IDENTITÄT- KARTENKAART

CARTA D'IDENTI- FICAZIONE

TARJETA DE IDENTIFICACION

CARTÃO DE IDENTIFICAÇÃO

LB. KORT

IDENTIFIKA- TIONSKORT

IDENTIFIKATIONS- KORT

TUNNETUS- KORTTI

ŽENSKO IDENTIFIKACIJE

This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance.

Diese Karte ist zusammen mit den Garantiebedingungen, die ihr Händler Ihnen ausliefert, Ihr Garanzschein für dieses Gerät.

Associer aux conditions de garantie (que vous devez recevoir par le revendeur), cette carte constitue le certificat de garantie de cet appareil.

Diese kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat.

Questa cartolina rappresenta insieme alla condizione di garanzia (che consegnate dal vostro rivenditore) il documento di garanzia per questo apparecchio.

La garantía de este aparato se compone de este folio y de las condiciones de garantía que le entregará su concesionario.

Este cartão, em conjunto com as condições de garantia em vigor (prestadas pelo seu vendedor) constitui o certificado de garantia do seu aparelho.

Dette kort, udlevert af din forhandler, er tillægget til garantibetingelserne for dette apparat.

Dette kort, sammen med garanti-betingelserne (som du får af din forhandler) udgør garantibeviset for dette apparat.

Dette kort tillsammans med garanti-betingelserna, som du får av installatören, utgör ett fullständigt garantibrev för detta produkt.

Tuonon laatuksen takuudenaikaa muodostavat lisäksi liitelmä ja lisäehtot, jotka lähetettyä saatatulla on.

Il presente è un solo dei fogli che costituiscono il documento di garanzia. Il foglio che completa la documentazione è quello che viene consegnato separatamente.

PHILIPS

